

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

⚠ DISCONNECT THE MAIN LINE BEFORE WIRING SECONDARY CONNECTORS.

UNDERCABINET FIXTURE INSTALLATION (UC) - REMOTE DRIVER (REM)


- A- MAKE THE CUT-OUT OPENING (**SEE DIMENSIONS BELOW**). LEAVE AT LEAST 6" (152mm) OF FEEDER CABLE ACCESSIBLE FROM UNDER THE CEILING.
- B- MAKE ALL NECESSARY CONNECTIONS (**FOLLOWING WIRING DIAGRAM AND POLARITY MARKING**) USING THE QUICK CONNECTORS (**INCLUDED**).
- C- HOLD THE (2) CLIPS UPWARD AND INSERT FIXTURE INTO CUT-OUT.

A + B + C


WIRING DIAGRAMS

Multiple luminaires must be connected in series (home run or fixture chain).

For 0-10V applications, 1x control for CCT and 1x control for INTENSITY must be used.

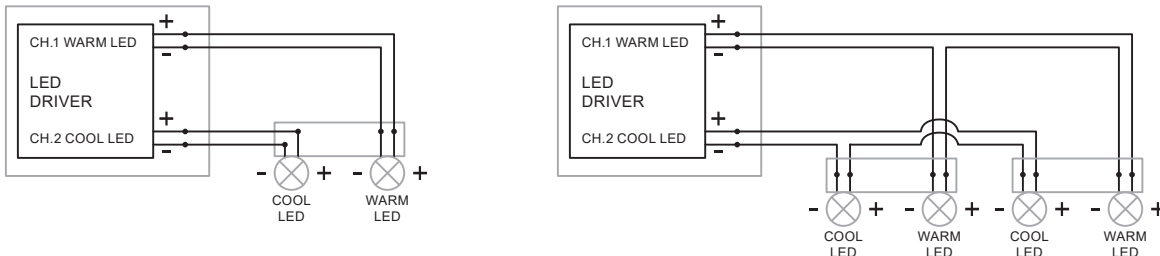

CH.1 WARM LED	LED +	RED
	LED -	BLACK
CH.2 COOL LED	LED +	RED
	LED -	BLACK

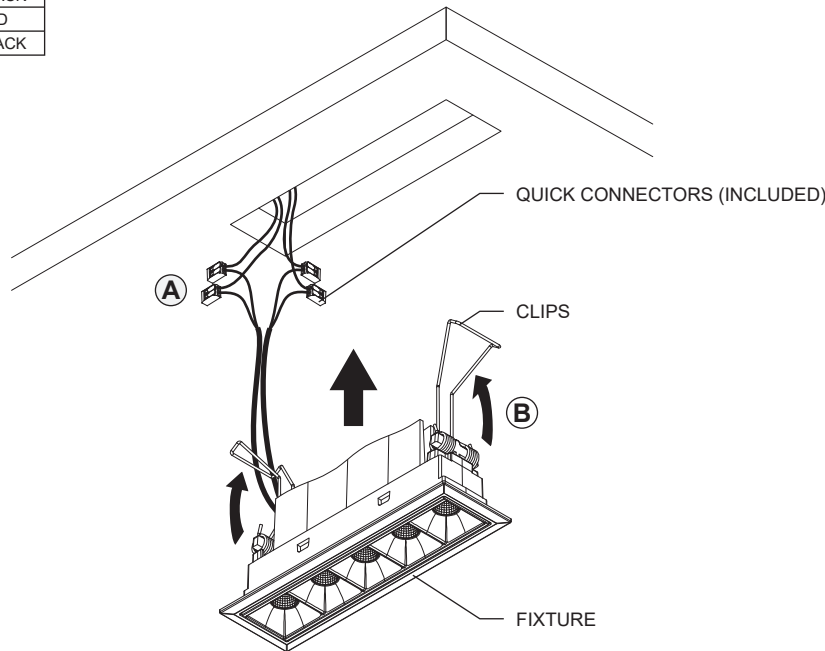

Models	Cut-out dimensions	Ceiling thickness	Clearance
LB05	1½" x 5⅞" (37 x 141mm)	⅝" to 1⅞" (3mm to 29mm)	2½" (64mm)
LB10	1½" x 10⅞" (37 x 274mm)		
LB15	1½" x 16" (37 x 406mm)		